

■ Particle Inspection Lamp




From Polarion comes the NET40 UV light. Designed for maintenance technicians, this hand-held HID light gives 40W of UV light. It's perfect for detecting contamination on metal surfaces and in nooks and crannies

- 40 W HID Xe 365 nm lamp
- 2500 Hr-rated bulb
- Electroformed reflector
- Li-ion battery life: 80 min.
- 3" beam, minimal spread
- Magnetic switch
- Rail handle
- 1.34 kg



Advantages

- Particle contour visible by naked eye
- Fluorescence yields high contrast
- Particles can be detected in confined spaces

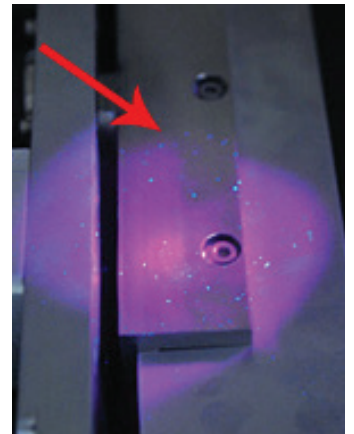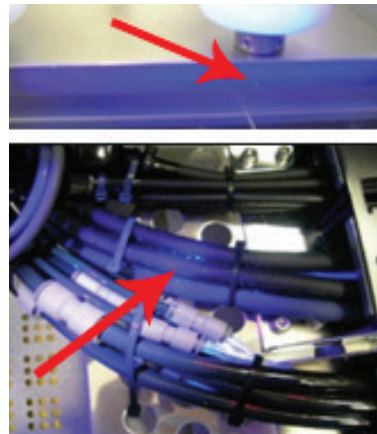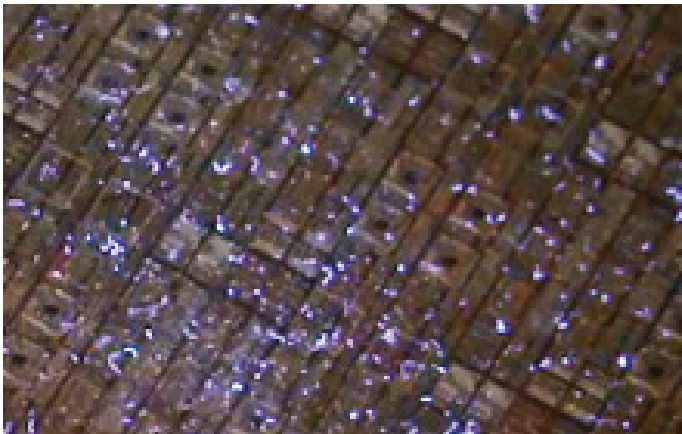

Other products



■ Ionizing Air Pencil

Quickly and easily remove dust that adheres to surfaces such as silicon wafers and masks. A Ø1.5mm air outlet and concentrated fast airflow are most suitable to effectively remove microscopic dust particles.



■ Vacuum wand

We supply an extraordinary number of different types of vacuum tips for many different sizes, shapes, weights and materials of wafers, substrates, dies and packages and applications/equipment.




Tel.: (31) 341 360 590
info@sps-europe.com
info@sps-asia.com

SHSK Dispense Starter Kit


For thick fluids and pastes

Thick, non-pourable fluids can trap air during production and when filling syringe barrels. The SmoothFlow™ Piston compensates for this air and prevents oozing or dripping

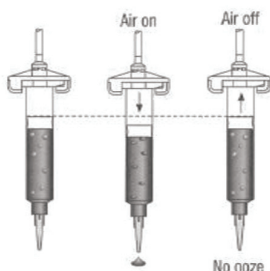

For thin fluids

The SmoothFlow PE pistons keep the fluid in the syringe barrel, contain fumes and provide smooth, clean, controlled dispensing.

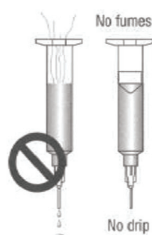

Sealants, epoxies, greases, RTVs



For best result...

1. Place piston in contact with the fluid
2. If the piston seems to stick during insertion, squeeze the syringe barrel slightly, and the piston can be pushed in easily.
3. To change tips, invert the syringe barrel. The piston will prevent any back-flow.
4. If a dot thin fluid forms on the tip, adjust the dispenser vacuum control.

Lubricants, paints, inks




If you choose not to use the piston, do not tip the syringe barrel upside down or lay flat. This will cause the fluid to run into the dispenser. We changing tips or attaching a tip cap, use the safety clip. Refer to the manual for more information.

Note: Cyanoacrylates, anaerobics and solvents dispense best with the LV Barrier™ Ultra System. Available in 3cc size (#5109LV-B) and 10cc size (#5111LV-B).

SHSK Kit

Consisting of:

- (2) Hand Plungers
- (5) 30cc Volume Dispense Barrels
- (5) PP Pistons white
- (5) 18 gauge 0,5" SST Needles
- (5) 18 gauge 0,5" PP Flex Needles
- (5) 25 gauge 0,5" SST Needles
- (5) 25 gauge 0,5" PP Flex Needles
- (5) Barrel tip caps blue
- (5) Barrel end caps blue

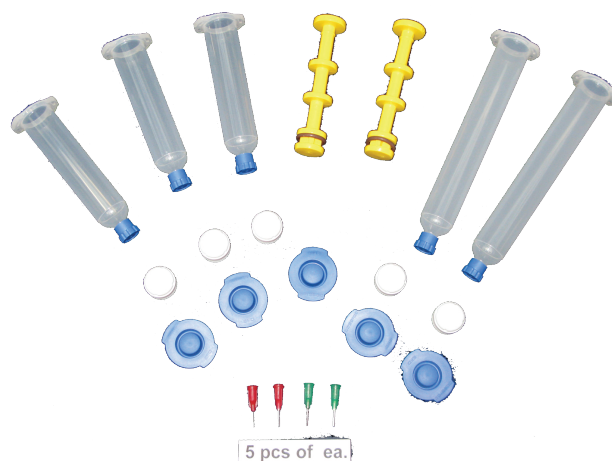

EUROPE:

SPS - Europe B.V.

Midden Engweg 41
NL-3882 TS Putten
The Netherlands
Tel.: (31) 341 360 590
Fax: (31) 341 360 589
e-mail: info@sp-s-europe.com

S.P.S. Vertriebs GmbH

Weisbergerstrasse 3
D-85053 Ingolstadt
Germany
Tel.: (49) 841 370 530
Fax: (49) 841 370 5322
e-mail: info.de@sp-s-europe.com

S.P.S. Ltd.

Aghmhor Annex
Whitmuir, Selkirk
TD7 4PZ United Kingdom
Tel.: (44) 1750 725 712
Fax: (44) 1750 214 01
e-mail: info.uk@sp-s-europe.com

S.P.S. bvba

Steenweg op Withof 5
B-2960 St. Job in 't Goor
Belgium
Tel.: (32) 3 440 0895
Fax: (32) 3 440 5181
e-mail: info.be@sp-s-europe.com

S.P.S. bvba

9, Rue du Pont à Lunettes
F-69390 Vourles
France
Tel.: (33) 4 72 31 78 35
Fax: (33) 4 78 05 13 45
e-mail: info.fr@sp-s-europe.com

S.P.S. bvba

Via G. Verdi 18b
27021 Bereguardo
Italy
Tel.: (39) 0 382 920 739
Fax: (39) 0 382 920 738
e-mail: info.it@sp-s-europe.com

ASIA:

SPS - Asia Technology Pte Ltd.

10 Ubi Crescent, Ubi Techpark,
Lobby B, #06-18 Singapore 408564
Tel.: (65) 6593 4318 Mob: (65) 9113 0172
e-mail: info@sp-s-asia.com

www.SPS-Europe.com
www.SPS-Asia.com

